

## SEAMLESS FLOOR RECEIVING, PREPARATION, AND INSTALLATION STEP-BY-STEP

### **PRODUCTS DELIVERED**


Vinyl Tarp/Cover  
Rolls of Crosslink Foam

### **PARTS NEEDED**

2 sets of 1"x4" wood boards for frame  
Duct Tape

### **TOOLS**

Pneumatic Power Stapler (or electric)  
Nail Gun or Power Screwdriver  
Scissors or Utility Knife

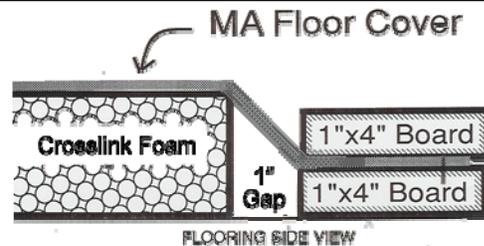

**NOTE: PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE RECEIVING, INSTALLING OR ASSEMBLING THIS PRODUCT. IF YOU REQUIRE FURTHER INFORMATION, PLEASE CALL MATSMATSMATS.COM AT 877-777-6287.**

### **Receiving**

1. Inspect the shipment for any external damage while the delivery driver is still there. If you detect any external damage to the shipment, inform the driver immediately and contact MatsMatsMats.com immediately, while the driver is still there.
2. Measure the tarp and all the foam rolls as soon as possible after delivery. If you notice any incorrect sizes beyond reasonable production tolerances, please notify MatsMatsMats.com immediately.
3. Unpack tarp as soon as possible and spread out over floor area for 24 hours. Tarp is shipped folded; wrinkles can become permanent if left folded longer than 7-10 days.

### **Preparation**

1. Installation area should be smooth and level. No need to remove previous flooring (carpet, tile, etc.) as long as the entire surface is flat and level.
2. Thoroughly sweep entire intended installation area.



## **Installation**

1. DO NOT GLUE FOAM TO FLOOR!
2. Frame perimeter by mounting 1"x4" boards permanently to floor. The frame should be fastened to floor with screws, a nail gun, or liquid nails, depending on the floor type.
3. Roll out foam and cut it to size to fit inside the frame. DO NOT GLUE FOAM TO FLOOR.
4. Leave a gap (1" minimum) between crosslink foam and each internal side of wood frame. This allows the foam to "spread out" as needed without buckling or bulging. This way you won't have to remove the tarp and recut the foam when the foam lifts in the center because you didn't give it room to "grow."
5. Use duct tape to hold crosslink foam together. 2" wide tape works great. Don't worry about foam seams. When tarp is installed over foam you will not see or feel them.
6. If you have a post in your floor area, start there first. Staple around the post first, making sure the rest of tarp is in position.

Pull tarp toward frame and begin stapling to frame. When stapling, start at the center of each side and work your way out to the corners in small, equally sized increments (3 foot increments work great), making sure the tarp is pulled tightly toward the outside. One person to pull tarp and another to staple is generally sufficient. DO NOT STAND OR KNEEL INBOARD OF FRAME DURING STAPLING.

7. Trim any excess vinyl fabric which extends past outside edge of frame.
8. Prior to installing second (top) set of 1"x4" boards, prepare them by routing edges, sanding, staining or painting as desired for a clean look.
9. Install second set of 1"x4" boards by screwing them to the frame base in order to maintain tension by pinching or sandwiching tarp.

### **WARNING: READ CAREFULLY!**

**RISK OF SERIOUS INJURY, PARALYSIS AND/OR DEATH IS INHERENT IN ALL ACTIVITIES INVOLVING MOTION OR HEIGHT. THIS EQUIPMENT IS TO BE USED ONLY BY PROPERLY TRAINED, QUALIFIED PERSONS UNDER SUPERVISED CONDITIONS. USE WITHOUT PROPER SUPERVISION IS DANGEROUS AND SHOULD NEVER BE UNDERTAKEN NOR PERMITTED. MATSMATSMATS.COM SHALL NOT BE LIABLE NOR RESPONSIBLE FOR PERSONAL INJURY OR PROPERTY DAMAGE INCURRED THROUGH THE USE OR MISUSE OF THIS PRODUCT.**